



USER INSTRUCTIONS

D30 Compact Digital Positioner

FCD PMENIM0030-01-A5 – 05/18

**Installation
Operation
Maintenance**



Contents

1. Introduction	3
2. Storage	6
3. Installation	7
4. Control	17
5. Maintenance/service	34
6. Trouble shooting	39
7. Technical data	40
8. Dimensions	42
9. Spare parts	43

1. Introduction

The D30 is a digital positioner designed primarily for controlling modulating valves. The positioner can be used with single or double acting actuators with either rotary or linear movement.

The D30 can be equipped with modules for limit switches and pressure gauges. Pressure sensors can be installed to offer advanced diagnostics.

The modules can be factory assembled before delivery or fitted later.

The modules for limit switches can contain one of the following:

- Two mechanical contacts
- Two proximity switches
- Two inductive sensors

See [page 12](#) for more options available



Warning!

Special Conditions for Safe Use

The enclosure of PMV D30 Intrinsically safe version is made of aluminium and any impact or friction caused by external objects shall be avoided in the application.

The surface area of the plastic parts on the cover exceeds the limits specified in EN 60079-0 for II 1G (EPL Ga) for gas group IIC and intensive rubbing or brush charging should be avoided when used in an IIC explosive atmosphere.

The cable connection of the Remote Unit with the D30 – unit shall be type A or B in accordance with EN 60079-25. The cable must be adequately mechanically protected in all instances and have a temperature rating for the ambient temperature range at the site.

Control Drawing D4-086C contains the parameters for intrinsically safety.

The intrinsic safe circuits D30 is insulated from earth and complies with the dielectric strength test of 500 VAC.

In a hazardous environment where there is a risk of explosion, electrical connections must comply with the relevant regulations.

Do not disconnect equipment unless area is known to be non-hazardous. or; read, understand and adhere to the manufacturer's live maintenance procedures. To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing,

Substitutions of components may impair suitability for hazardous (classified) locations.

When installing PMV D30 Intrinsically safe unit always consult drawing D4-086C



Maintenance Service

Warning!

When upgrading electronically parts inside a PMV positioner approved for installation in Hazardous locations special procedures apply, permission from PMV/Flowserve is required prior to the start of work. Please contact a Flowserve office for information regarding proper procedures www.pmv.nu or infomv@flowserve.com

-Always turn off the air and electrical supplies before starting any work.

Safety instruction

Read the safety instructions in this manual carefully before using the product. The installation, operation, and maintenance of the product must be done by staff with the necessary training and experience. If any questions arise during installation, contact the supplier/sales office before continuing work.

Warning

The valve can open or close very quickly when in operation and, if handled incorrectly, it may cause damages. There may also be unintentional effects due to it fully opening or shutting off the flow in the process pipe. Please note the following:

- If the input signal fails or is switched off, the valve operates quickly to its default position.
- If the compressed air supply fails or is turned off, rapid movements can occur.
- The valve is not controlled by the input signals when in the Out of Service mode. It will open/close in the event of an internal or external leak.
- If a high value is set for Cut off, fast movements can occur.
- When the valve is controlled in the Manual mode, the valve can operates quickly.
- Incorrect settings can cause self-oscillation, which can lead to damage.

Important

- Always turn off the compressed air supply before removing or disconnecting the air supply connection or the integral filter. Remove or disconnect with care as air connection "C-" is still under pressure even after the air supply is turned off.
- Always work in an ESD (Emergency Discharge) protected area when servicing the Printed circuit boards (PCB's). Make sure the input signal is switched off.
- The air supply must be free from moisture, water, oil and particles according to DIN/ISO 8573-1-2001 3.2.3.

2. Storage

General

The D30 positioner is a precision instrument. Therefore it is essential that it is handled and stored in the correct way. Always follow the instructions in this IOM!

Note: As soon as the positioner is connected and started, internal air venting will provide protection against corrosion and prevent the ingress of moisture. For this reason, the air supply pressure should always be kept on unless repair/maintenance work of the positioner, actuator or valve equipment is in progress.

Keep the cover mounted on the positioner and replace any damaged window.

Storage indoors

Store the positioner in its original packaging. The storage environment must be clean, dry, and cool (15 to 26°C, 59 to 79°F).

Storage outdoors or for a longer period

If the positioner must be stored outdoors, it is important that all the cover screws are tightened and that all open ports/connections are properly sealed and/or plugged.

The red shipping plugs are not intended as a permanent outdoor plug. The unit should be packed with a desiccant (silica gel) in a plastic bag or similar, covered with plastic, and not exposed to sunlight, rain, or snow.

This is also applicable for long-term storage (more than 1 month) and for long transport by sea.

Storage in a warm place

When the positioner is stored - without air supply pressure applied - in a warm place with a high relative humidity and is subjected to daily temperature variations, the air inside the unit will expand and contract.

This means that air from outside the unit may be drawn into the positioner. Depending on the temperature variations, relative humidity, and other factors, condensation and corrosion can occur inside the unit, which in turn can give rise to functional disorders or a failure.

3. Installation


Removal of cover

General purpose / Intrinsically safe

Remove cover by first loosening the screw **1** and then the two screws **2**.

To install cover, first tighten the screw **1**, then the two screws **2**.

Tighten to 1.5 Nm $\pm$ 15%.

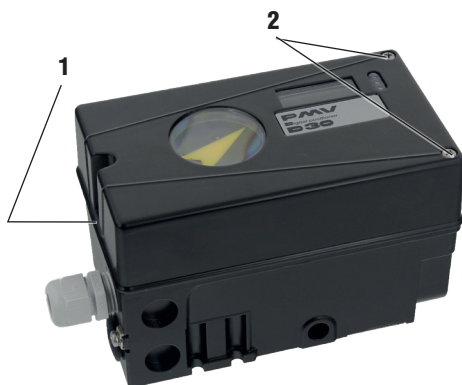

Supply air should meet requirements specified on [page 5](#). A coalescing filter/regulator should be installed in front of the supply air connection. Now connect the air supply to the filter, which is connected to the D30 positioner.

Tubing

It is recommended to use tubes with a minimum inner diameter of $\varnothing$ 6 mm ($\frac{1}{4}$ ").

Air supply requirements

Poor quality air supply is the main cause of problems in pneumatic systems.

The air supply must be free from moisture, water, oil and particles and delivered @ 1.4-8 barg (20-115 psi)

Standard: **DIN/ISO 8573-1-2001 3.2.3**

Filtered to 5 Micron, dew point $-40^{\circ}\text{C}/\text{F}$

Oil 1mg/m³ (0,83 ppm by weight)

The air must come from a refrigeration dried supply or be treated in such a way that its dew point is at least 10°C (18°F) below the lowest expected ambient temperature.

To ensure a stable and problem-free air supply, we recommend the installation of a coalescing filter/regulator $<5\mu$ as close to the positioner as possible.

Before the air supply is connected to the positioner, we recommend the hose is opened freely for 2 to 3 minutes to allow any contamination to be blown out. Direct the air jet into a large paper bag to trap any water, oil, or other foreign materials. If this indicates that the air system is contaminated, it should be properly cleaned before continuing.



WARNING! Do not direct the open air jet towards people or objects because it may cause personal injury or damage.


Mounting

Note: If the positioner is installed in a hazardous environment, it must be of a type approved for this purpose.

All versions of the D30 positioner have an ISO F05 footprint. The holes are used to attach the D30 to the mounting bracket B. Please contact PMV or your local distributor representative with actuator specifics for the proper mounting bracket and hardware.

The spindle shaft S09 can be changed to suit various actuators in question by the use of adaptors.


It is important that the positioner's spindle shaft and the lever arms, that transfer the actuator movements, are correctly mounted. Any tension between these parts can cause incorrect operation and abnormal wear.

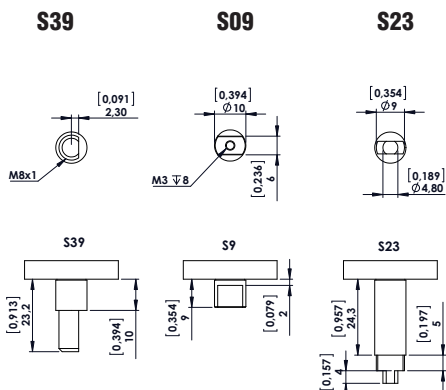

Note: There are many spindle options available depending on the actuator. Please contact your local PMV supplier for all options available.

Spindle shafts

Assembly examples

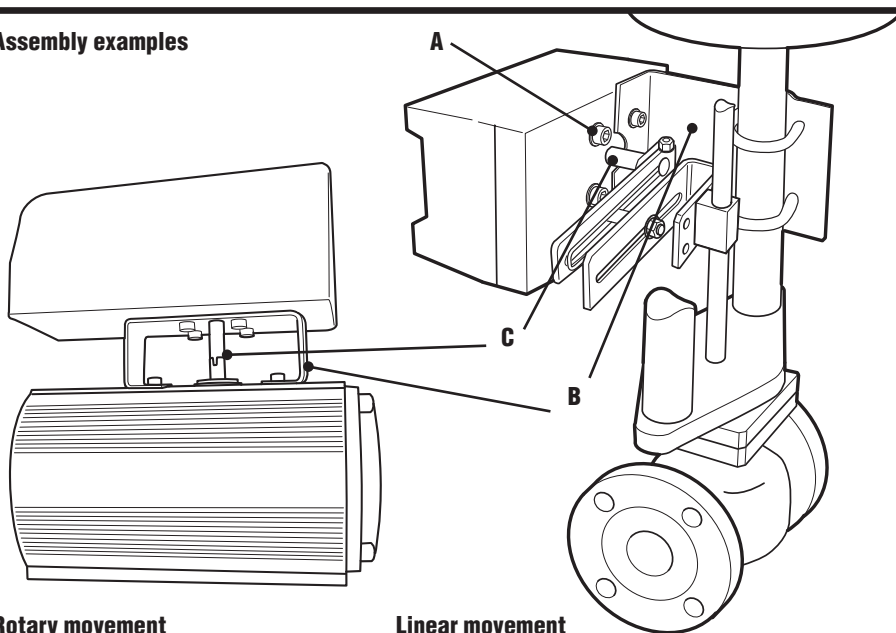

Rotary movement

Linear movement

Connections

Air:

Port S	Supply air, 1.4-8 barg (20-115 psi)
Port C+	Connection to actuator, opening
Port C-	Connection to actuator, closing (only for double action) Plug for single action, see below

Dimensions

Air connections: 1/4" NPT alt. G 1/4"


Electrical connection: M20 x 1.5 alt. NPT 1/2"

Loctite 577 or equivalent is recommended as a sealant.

Electrical connection

See [page 12](#).

**Must be plugged when converting
to single action function.**

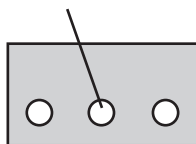

C+ C- S


**External air
Connection**

Rotary actuators VDI/VDE 3485 (Namur)

Fit bracket on actuator and secure with 4 x screws.

Mount positioner to bracket. Secure with 4 x M6 screws using 2.5 Nm (1.8 lb ft) torque.


Install tubing between actuator and positioner.

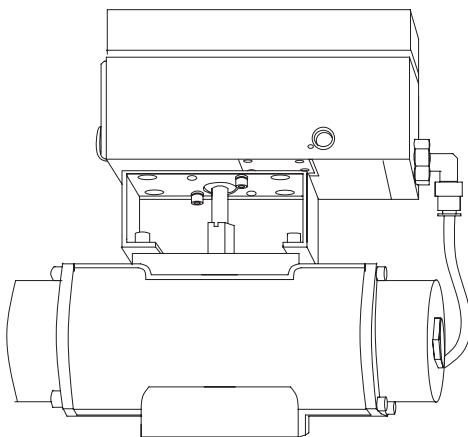

Single acting positioner, Direct function

Actuator with closing spring


When the control signal increases, the pressure C+ to the actuator is **increased**. The valve stem moves upward and rotates the positioner spindle **counter-clockwise**. When the control signal drops to zero, C+ is vented and the valve closes.

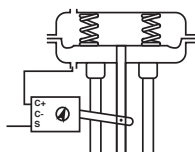

Reverse function

Actuator with opening spring

 
When the control signal increases the pressure C+ to the actuator is **increased**. The valve stem moves downward and the positioner spindle rotates **clockwise**. When the control signal drops to zero, C+ is vented and the valve opens.



Double acting positioner, Direct function

Double acting actuator

When the control signal increases, the pressure C+ to the actuator is increased. The valve stem is pressed upward and rotates the positioner spindle counter-clockwise. When the control signal is reduced, the pressure C- to the actuator increases and the valve spindle is pressed downward. If the control signal disappears, the pressure goes to C-, C+ vents, and the valve closes.

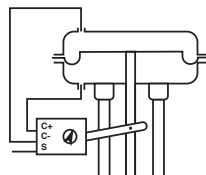

Gauge block

Gauge blocks are available for D30s with ¼" G or ¼" NPT air connections. To install, ensure seals are aligned, then use 3 Nm (2.2 lb ft) of torque when fastening the gauge block to the positioner using the two screws supplied with the kit.






Terminal block diagram for the D30.

The D30 digital positioner has been designed to operate correctly in electromagnetic (EM) fields found in typical industrial environments. Care should be taken to prevent the positioner from being used in environments with excessively high EM field strengths (greater than 10 V/m). Portable EM devices such as hand-held two-way radios should not be used within 30 cm of the device.

An electromagnetic line filter can be used to further eliminate noise.

In the event of a severe electrostatic discharge near the positioner, the device should be inspected to ensure correct operability. It may be necessary to recalibrate the D30 positioner to restore operation.

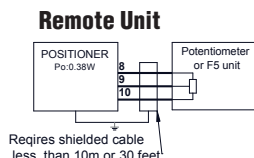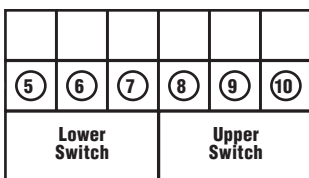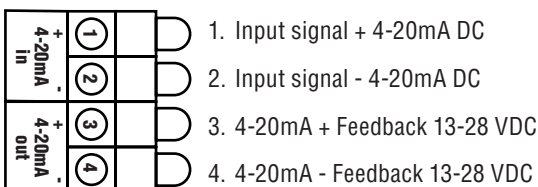


Order code	Switch	5	6	7	8	9	10
S	Limit switches Mechanical SPDT	NO	NC	Com	NO	NC	Com
N	Namur V3 type sensor, P&F NJ2-V3-N	-	+	Not Used	-	+	Not Used
P	Limit switches Proximity SPDT	NO	NC	Com	NO	NC	Com
5	Slot type Namur sensor, P&F SJ2-SN	-	+	Not Used	-	+	Not Used
6	Slot type Namur sensor, P&F SJ2-N	-	+	Not Used	-	+	Not Used
RM	Remote Board	Not Used	Not Used	Not Used	CCW	RA	CW



Warning! In a hazardous environment where there is a risk of explosion, electrical connections must comply with the relevant regulations.

Limit switch calibration


- Loosen screws (1) and adjust cams.
- Adjust lower cam first and then upper cam
- Tighten screws (1)

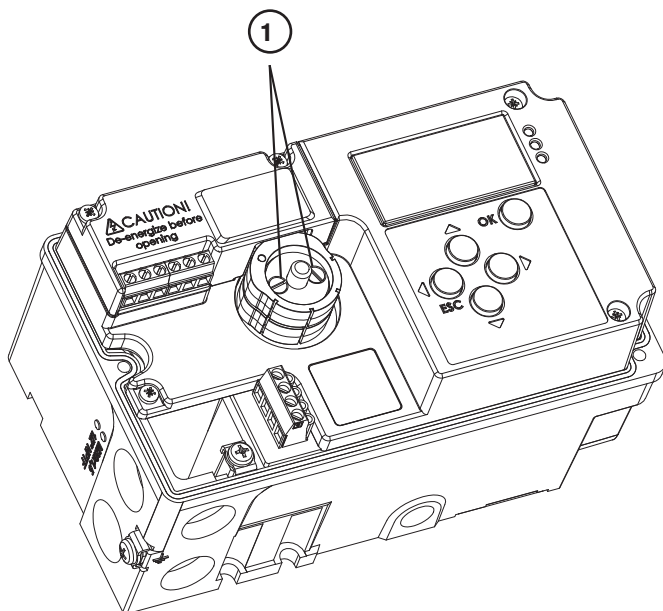

Feedback option (cont.)

Calibration of the 4-20 mA transmitter

Go to menu shown in diagram.
Connect mA meter I and check reading.
Adjust output signal using Up or Down key
until meter I reads 4.00 mA.
Finish by pressing OK.
Repeat the above for 20 mA.

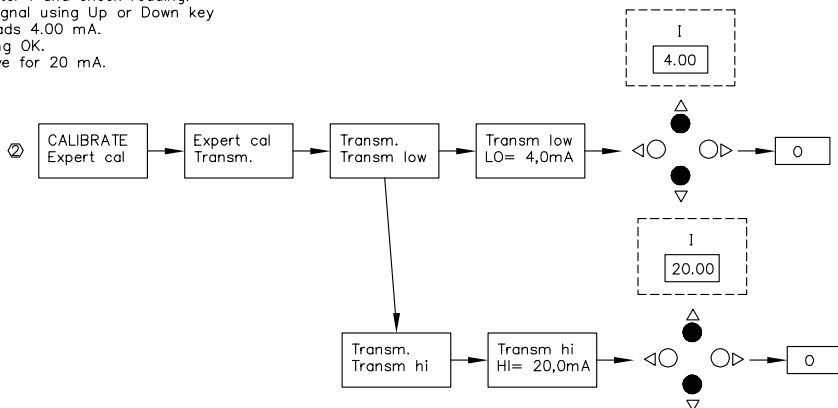

Connecting switches/input signal/output signal

model code position K										model code position B										A	E			
	Note	SWITCH	Type	Ci nF	Ui uH	Ui V	I mA	Pi mW	Min. temp	14 (°)	15 (°)	16 (°)	17 (°)	18 (°)	19 (°)	20 (°)	21 (°)	22 (°)	23 (°)	24 (°)	25 (°)	26 (°)	27 (°)	28 (°)
5	2	SJ2-SN	NAMUR	30	100	14	25	34	-40	96	68	56	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
6	1	SJ2-N	NAMUR	30	100	14	25	34	-25	96	68	56	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
7	1	SC2-ND-GH	NAMUR	150	150	14	25	34	-25	95	67	55	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
8	1	SC2-ND-YE	NAMUR	150	150	14	25	34	-25	95	67	55	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
G		Mechanical switch gold	Mec.	1	1	28	45	315	-40	78	60	45		Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
N	3	SJ2-V3-SN	NAMUR	30	50	14	25	34	-25	96	68	56	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
P		Non-Intr. Proximity	Reed	1	1	28	45	315	-40	85				Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
S		Mechanical switch	Mec.	1	1	28	45	315	-40	78	60	45		Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go
U	3	NCM4-V3-ND	NAMUR	100	100	14	25	34	-25	73	88	100	100	Go	Do	Go	Do	Go	Do	Go	Do	Go	Do	Go

 
note 1 Higher U.II and P.I with lower ambient temperatures are allowed see Certificate PB 99 ATEX 2219 X or IECEx PB 11.0091X

note 2 Higher U.II and P.I with lower ambient temperatures are allowed see Certificate PB 00 ATEX 2049 X or IECEx PB 11.0092X

note 3 Higher U.II and P.I with lower ambient temperatures are allowed see Certificate PB 00 ATEX 2032 X or IECEx PB 11.0021X


4-20mA input signal Pin 1 and 2

(Position B; B=A or B=E) AND
(Position J; J=4 or J=5)



4-20mA Output signal Pin 3 and 4

 (Position B; B=A or B=E) AND
(Position J; J=4 or J=5) AND
(Position K; K=X)



Type sign example

Area for markings, Ex ratings and associated warnings if applicable

Logo type

Type and model

Input Pressure:

Input Signal:

Temp Range:

Applicable Certificat

Special note

Area for switch type and terminals

FLOWERVE, SWEDEN
PMV Automation AB
Solna, Sweden
www.flowserve.com

H ☐ PA ☐ FF ☐

Software: Prod.year: S/N:

Bar Code

Serial.no

Ingress protection rating

REV.	DESCRIPTION	DATE	APPROVED
1	Area for logotype Område för logotyp		
2	Type and model Typbeteckning och modellkod		
3	Certification declaration		
4	Input Pressure:		
5	Input Signal:		
6	Temp Range:		
7	Applicable Certificat		
8	Special note		
9	Area for switch type and terminals		
10	FLOWERVE, SWEDEN PMV Automation AB Solna, Sweden www.flowserve.com		
11	H ☐ PA ☐ FF ☐		
12	Software: Prod.year: S/N:		
13	Bar Code		
14	Serial.no		
15	NEMA Type		
16	Model code		
17	Certification declaration		
18	D30 Model code		
19	Scheduled drawing		
20	DESCRIPTION		
21	MATERIAL		
22	PRODUCTION		
23	DATE		
24	SCALE		
25	DATE		
26	SCALE		
27	DATE		
28	SCALE		
29	DATE		
30	SCALE		
31	DATE		
32	SCALE		
33	DATE		
34	SCALE		
35	DATE		
36	SCALE		
37	DATE		
38	SCALE		
39	DATE		
40	SCALE		
41	DATE		
42	SCALE		
43	DATE		
44	SCALE		
45	DATE		
46	SCALE		
47	DATE		
48	SCALE		
49	DATE		
50	SCALE		
51	DATE		
52	SCALE		
53	DATE		
54	SCALE		
55	DATE		
56	SCALE		
57	DATE		
58	SCALE		
59	DATE		
60	SCALE		
61	DATE		
62	SCALE		
63	DATE		
64	SCALE		
65	DATE		
66	SCALE		
67	DATE		
68	SCALE		
69	DATE		
70	SCALE		
71	DATE		
72	SCALE		
73	DATE		
74	SCALE		
75	DATE		
76	SCALE		
77	DATE		
78	SCALE		
79	DATE		
80	SCALE		
81	DATE		
82	SCALE		
83	DATE		
84	SCALE		
85	DATE		
86	SCALE		
87	DATE		
88	SCALE		
89	DATE		
90	SCALE		
91	DATE		
92	SCALE		
93	DATE		
94	SCALE		
95	DATE		
96	SCALE		
97	DATE		
98	SCALE		
99	DATE		
100	SCALE		

REV.	DESCRIPTION	DATE	APPROVED
1	Area for logotype Område för logotyp		
2	Type and model Typbeteckning och modellkod		
3	Certification declaration		
4	Input Pressure:		
5	Input Signal:		
6	Temp Range:		
7	Applicable Certificat		
8	Special note		
9	Area for switch type and terminals		
10	FLOWERVE, SWEDEN PMV Automation AB Solna, Sweden www.flowserve.com		
11	H ☐ PA ☐ FF ☐		
12	Software: Prod.year: S/N:		
13	Bar Code		
14	Serial.no		
15	NEMA Type		
16	Model code		
17	Certification declaration		
18	D30 Model code		
19	Scheduled drawing		
20	DESCRIPTION		
21	MATERIAL		
22	PRODUCTION		
23	DATE		
24	SCALE		
25	DATE		
26	SCALE		
27	DATE		
28	SCALE		
29	DATE		
30	SCALE		
31	DATE		
32	SCALE		
33	DATE		
34	SCALE		
35	DATE		
36	SCALE		
37	DATE		
38	SCALE		
39	DATE		
40	SCALE		
41	DATE		
42	SCALE		
43	DATE		
44	SCALE		
45	DATE		
46	SCALE		
47	DATE		
48	SCALE		
49	DATE		
50	SCALE		
51	DATE		
52	SCALE		
53	DATE		
54	SCALE		
55	DATE		
56	SCALE		
57	DATE		
58	SCALE		
59	DATE		
60	SCALE		
61	DATE		
62	SCALE		
63	DATE		
64	SCALE		
65	DATE		
66	SCALE		
67	DATE		
68	SCALE		
69	DATE		
70	SCALE		
71	DATE		
72	SCALE		
73	DATE		
74	SCALE		
75	DATE		
76	SCALE		
77	DATE		
78	SCALE		
79	DATE		
80	SCALE		
81	DATE		
82	SCALE		
83	DATE		
84	SCALE		
85	DATE		
86	SCALE		
87	DATE		
88	SCALE		
89	DATE		
90	SCALE		
91	DATE		
92	SCALE		
93	DATE		
94	SCALE		
95	DATE		
96	SCALE		
97	DATE		
98	SCALE		
99	DATE		
100	SCALE		

D30 Digital Positioner model code

A	Model no	
	D 3 0	Full LCD menu, LED status
B	Approval, Certificate	
	D	General purpose version
	E	IEC
	A	ATEX
C	Function	
	H	High Flow - Single/double acting - Spool valve
D	Connections Air, Electrical	
	G	1/4" G air, M20 x 1,5 electrical
	M	1/4" NPT air, M20x1,5 electrical
	N	1/4" NPT air, 1/2"NPT electrical
E	Connection feature	
	2	2 Electrical conduits
	T	2 Electrical conduits, threaded Aux. ventilation
F	Housing material/Surface treatment	
	U	Aluminium/Powder epoxy, black
G	Mounting options / Shaft	
	R M	Remote mounting (position sensing unit sold separately)
	0 9	Double D type, adaptor spindle
	2 1	NAF shaft, including Mounting bracket D4-As920
	2 3	VDI/VDE 3845 rotary, Mounting kit not included
	3 0	Adaptor shaft, select between 01/06/26/30/36
	3 9	IEC 534-6, Flat D type, nut incl. Mounting kit not included
H	Cover and Indicator	
	P V A	PMV,Black cover, Arrow indicator
	P V B	PMV, Black cover, No indicator
	F W A	Flowserve, White, Arrow indicator
	F W B	Flowserve, White, No indicator
I	Temperature/seals	
	U	-40°C to 80°C
J	Input signal/Protocoll	
	4	4-20 mA / none
	5	4-20 mA, / HART
	P	Profibus PA (Only when B = D)
K	Feedback option, switches	
	X	No feedback option
	T	4-20 mA transmitter only
	S	Limit switches Mechanical SPDT
	N	Namur V3 type sensor, P+F NJ2-V3-N
	P	Limit switches Proximity SPDT
	5	Slot type Namur sensor, P+F SJ2-SN
	6	Slot type Namur sensor, P+F SJ2-N
L	Options, Add in electronics	
	0	No pressure sensors
	3	3 pressure sensors
M	Accessories	
	X	No accessories
	M	Gauge block 1/4" G (DA, 3 gauges included)
	N	Gauge block 1/4" NPT (DA, 3 gauges included)
N	Special Options	
	N	No special options
	S	Exhaust silencers

A	A	A	B	C	D	E	-	F	G	G	H	H	H	-	I	J	K	L	M	N
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

4. Control

Menus and pushbuttons

The positioner is controlled using the five pushbuttons and the display, which are accessible when the aluminum cover is removed.

For normal functioning, the display shows the current value. Press the ESC button for two seconds to display the main menu.

Use the pushbuttons  to browse through the main menu and the sub-menus.

The main menu is divided up into a basic menu and a full menu, see [page 19](#).

Other functions

ESC

Exit the menu without making any changes (as long as any changes have not been confirmed with OK).

FUNC

To select function and change parameters.

OK

To confirm selection or change of parameters.

MENU INDICATOR

Displays the position of the current menu row in the menu.

IN SERVICE


The positioner is following the input signal. This is the normal status when the positioner is working.

OUT OF SERVICE

The positioner is not following the input signal. Critical parameters can be changed.

MANUAL

The positioner can be stroked manually using the pushbuttons. See section “Man/Auto”, [page 25](#).

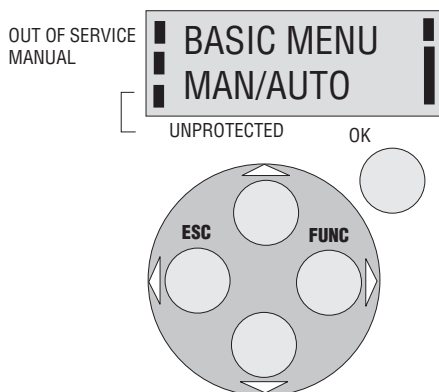

UNPROTECTED

Most of the parameters can be changed when the positioner is in the “Unprotected” position. However, critical parameters are locked when the positioner is in the “In service” position.

LED color (R=Red, Y=Yellow, G=Green)

Codes during In Service			
	R		Actual valve position deviates from requested/set position
	Y		Fully opened/closed valve using Cut Off (= OK)
	G		Controlling valve position (= OK)

Codes during Out of service			
	R	Y	Input signal not calibrated
	Y	G	Feedback signal not calibrated
	Y	Y	Out of Service (= OK)

Calibration alarm			
	R	G	No feedback movement. Check linkage from actuator to positioner
	R	Y	No air available. *(alarm available only when pressure sensors installed)
R	G	G	No pot connection. Check pot cable inside positioner.
R	Y	Y	No air relay. Check cable inside positioner.
R	Y	G	Pot not calibrated. Go to Calibrate->Expert->Pot on LCD menu.

Menu indicator

There are indicators at both sides of the display window and they indicate as follows:

Flashing in position **Out of service**

Flashing in position **Manual**

Displayed in position **Unprotected**

The indicators on the right-hand side show the position in the current menu.

Menus

To display the menus you can select:

- **Basic menu**, which means you can browse through four different menu items

- **Full menu**, which comprises ten steps. Use the Shift Menu to browse through the menu items

Full Menu can be locked out using a passcode.


The main menus are shown on the next page and the sub-menus on the subsequent pages.

Changing parameter values


Change by pressing ◀ ▶ until the desired figure is flashing.

Press ⬅ ➡ to step to the desired figure.
Confirm by pressing OK.

A change can be undone by pressing the **ESC** button, which returns you to the previous menu.

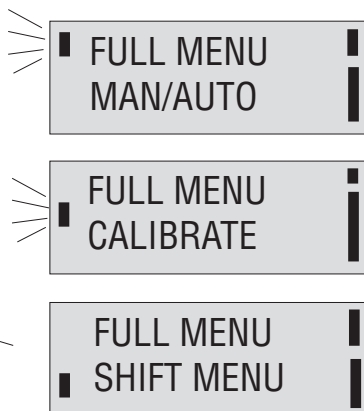

Menu system

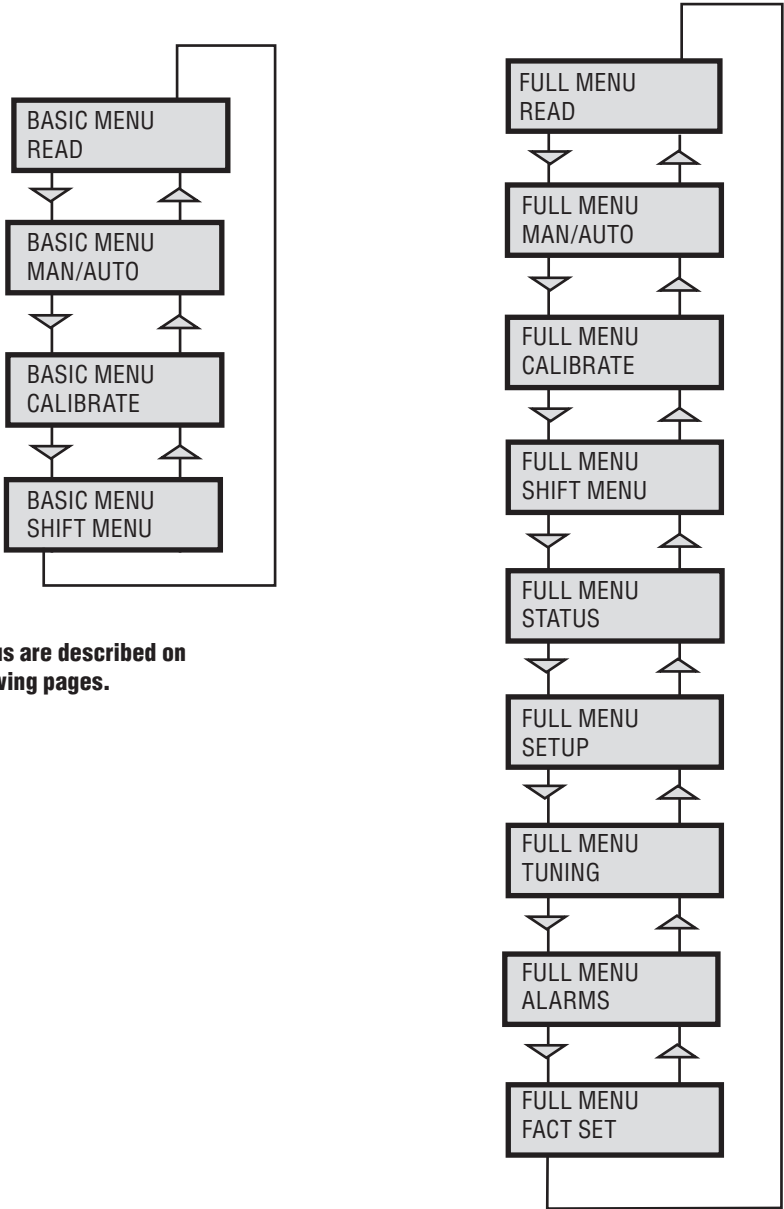

The menus are described on the following pages.

**BASIC MENU
CALIBRATE**



First start

“Calibrate” is displayed in the basic menu automatically, the first time power is applied. It can be selected from the basic or full menu at any time.

A complete auto-calibration will take a few minutes depending on size of actuator and includes end limit calibration (zero and span), auto-tuning (dynamically sets the control parameters for the actuated package the positioner is controlling) and a check of the movement speed. Start the automatic calibration by selecting **Auto-Cal** and then answer the questions in the display by pressing **OK** or the respective arrow. More detail about these questions can be found on [page 23](#).

Calibration error messages

If a fault occurs during calibration, one of the following error messages can be displayed:

No movement/press ESC to abort

Typically the result of an air delivery issue to the actuator, a stuck valve or actuator, or incorrect mounting and/or linkage arrangement. Check for proper supply air to the positioner, pinched tubing, proper actuator sizing, proper linkage and mounting arrangement.

Pot uncalibrated/press ESC to abort

The potentiometer is out of range. The potentiometer is aligned using the Calibrate - Expert cal - pot Menu. The calibration sequence must be restarted after the fault is corrected.

Tip! Instant quick calibration

The D30 can be instantly calibrated by pressing the top + bottom buttons for 5 seconds (see picture). This function is available from any menu position.

First start, Profibus PA

For Profibus PA, connect the input signal at pos 1 and 2 on the terminal block. See Electrical connections in the manual.

In the SETUP/Devicedata/Profibus: change the address from 126 to any number between 1-125. Never use the same number with more than one unit. Install values in failsafe mode, for communication when loss of signal.

Calibrate the unit.

GSD files are available at our web-page www.pmv.nu

To install the D30_PROFIBUS.DDL file to Siemens SIMATIC PDM.

1. Move the files to the directory where the DeviceInstall.exe is located.
2. Run DeviceInstall.exe

**For Expert Calibration
parameters - see [page 29](#)!**

**For further information on
calibrating the pot - see [page 38](#)**



Instant quick calibration

Parameter	Description		BYTE
SP	Setpoint	The SP has 5 bytes, 4 bytes for the float value and one status byte. The status byte needs to be 128 (0x80Hex) or higher for the D30 to accept it.	4+1=5
READBACK	Position	The READBACK has 5 bytes, 4 bytes for the float value and one status byte.	4+1=5
POS_D	Digital position	Returns actual position as a digital value with definitions as below 0 = Not initialized 1 = Closed 2 = Opened 3 = Intermediate	2
CHECKBACK		Detailed information of the device, coded bit wise. Several messages can occur at the same time.	3
RCAS_IN	Remote Cascade	The RCAS_IN has 5 bytes, 4 bytes for the float value and one status byte.	4+1=5
RCAS_OUT	Remote Cascade	The RCAS_OUT has 5 bytes, 4 bytes for the float value and one status byte.	4+1=5

Status Byte Table

MSB	LSB	Meaning	D30 info
0 0 0 0 1 0 x x		Not connected	
0 0 0 0 1 1 x x		Device failure	PROFibus PA module failure
0 0 0 1 0 0 x x		Sensor failure	No sensor value
0 0 0 1 1 1 x x		Out of service	AI Function Block in O/S mode
1 0 0 0 0 0 x x		Good - Non cascade	Measured value OK All Alarm values used
1 0 0 0 0 0 0 0		OK	
1 0 0 0 1 0 0 1		Below low limit Lo	Advisory alarm
1 0 0 0 1 0 1 1		Above high limit Hi	Advisory alarm
1 0 0 0 1 1 0 1		Lo-Lo	Critical alarm
1 0 0 0 1 1 1 1		Hi-Hi	Critical alarm

Example SP = 43.7% and 50%

Float	Hex	Status
43.7	42 2E CC CD	80
50.0	42 48 00 00	80

(FF) Foundation Fieldbus function blocks

Function blocks are sets of data sorted by function and use. They can be connected to each other to solve a control process, or to a controlling DCS. To get a good introduction and understanding of FF look at www.fieldbus.org and download the “Technical Overview” from the About FF pages.

(TB) Transducer Block

The TB contains unit specific data. Most of the parameters are the same as parameters found on the display. The data and the order of data varies between different products. The AO-block setpoint (SP) and process value (PV) parameters are tranceived to the TB through a channel. The TB has to be in AUTO for the AO-block to be in AUTO.

The positioner has to be in menu-auto mode and in service to be controlled from the fieldbus. If the positioner is placed in menu-manual mode then the transducer block will be forced to (LO) local override. In this way a person in the field will be able to control the positioner from the keypad, without collision with a control loop.

(RB) Resource Block


The RB is a set of parameters that looks the same for all units and products. The values of the RB define unit information that concerns the Fieldbus Protocol such as MANUFAC_ID which informs the unique manufacturer id. For Flowserve it is 0x464C53. The RB has to be in AUTO for the AO-block to be in AUTO.

(AO) Analogue Output Block

The AO follows Fieldbus Foundation’s standard on content and action. It is used for transferring (SP) setpoints from the bus to the positioner.

CAS_IN (cascade input) and RCAS_IN (remote cascade input) are selected as inputs to the AO block depending on the MODE_BLK parameter. The selected input will be relayed to the SP parameter of the AO block. BKCAL_OUT

AO-block
overview

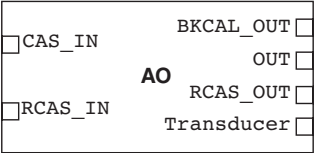


(back calculated output) is a calculated output that can be sent back to a controlling object so that control bumps can be avoided. Usually the BKCAL_OUT is set to be the (PV) process value of the AO-block, i.e. the actual measured position of the valve. OUT is the primary calculated output of the AO block. During a limited action (ramping) of the AO block the RCAS_OUT parameter will supply the final setpoint and the OUT parameter will be the limited output. The transducer block is connected through a channel to the AO block. Through this channel the OUT value and SP are tranceived.

In order to set the AO block to AUTO, the TB and the RB have to be in AUTO. Further the AO block has to be scheduled. Using National Instruments Configurator; scheduling can be done by adding the unit to a project and then click on the “upload to device” icon.

To write a setpoint value by hand, add Man to MODE->Permitted parameter, and then choose MODE->Target to Man. Make sure that the unit is scheduled.

Example

A typical FF block loop control might look like the following: Where the positioner is represented by the AO-block.

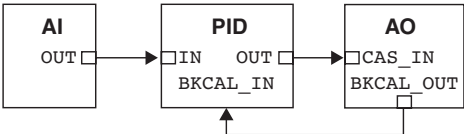

BASIC MENU
CALIBRATE



The contents of the menu are shown on the next page. The various menu texts are described below.

Auto-Cal

Start tune

Auto-tuning and calibration of end positions

Starts the tuning. Questions/commands are displayed during calibration. Select the type of movement, function, etc. with  and confirm with OK as shown in the chart on the next page.

Lose prev value? OK?

A warning that the value set previously will be lost (not during the first auto-tuning).

Direction? Air-to-open.

Select for direct function.

Direction? Air-to-close.

Select for reverse function.

In service? Press OK

Calibration finished. Press OK to start positioner functioning. (If ESC is pressed, the positioner assumes the "Out of service" position but the calibration is retained).

TravelCal

Start cal

Calibration of end positions

Start end position calibration.

Lose prev value? OK?

A warning that the previously set value will be lost. Confirm with OK. The calibration sequence starts.

In service? Press OK

Calibration finished. Press OK to start positioner functioning. (If ESC is pressed, the positioner assumes the "Out of service" position but the calibration is retained).

Perform

Normal

Setting gain

100% gain

Perform G, F, E, D, C, B, A

Possibility to select a lower gain in steps.
Default setting is D.

Note. Original P. I. D. will always be shown in display

The menu contents are shown in the figures on the right and the texts are described below:



Current values can be read using the Read Menu and some values can be reset.

Pos Shows current position
Set&pos Set point and position
Set&dev Set point and deviation
Pos graph Shows position graph
Temp Shows current temperature

Statistics n cycles Shows number of cycles.
 1 cycle = [move of valve +change direction+move opposite direction] regardless of size of each move/stroke.

Acc travel Travel = [accumulated % valve has moved/100].
 Example: move 60% up + move 40% down =>Acc travel = 1

mean dev Shows accumulated deviation in %

m.abs dev Shows accumulated absolute deviation in %


of resets Shows number of resets

runtime Shows accumulated runtime since last reset

Extr temp Shows extreme min and max temperature

Histogram Shows position and time for position value

Alarms Displays tripped alarms

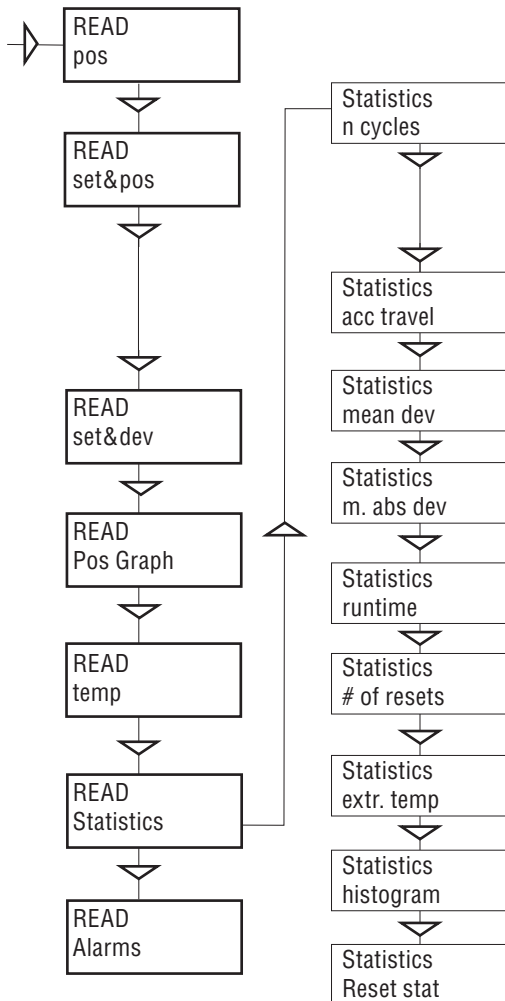



The Man/Auto menu is used to change between manual and automatic modes.

The menu contents are shown in the figures on the right and the various texts are described below:

AUT, OK = MAN

Positioner in automatic mode

MAN, OK = AUT

Positioner in manual mode

In the **MAN** mode, the value of POS can be changed using  . The push-buttons increase/decrease the value in steps. The value can also be changed in the same way as for the other parameter values, as described on page 14

Other functions

C+ can be fully opened by pressing  and then immediately **OK** simultaneously.

C- can be fully opened by pressing  and **OK** simultaneously.

C+ and C- can be fully opened for blowing clean by pressing   and **OK** simultaneously.




When changing between **MAN** and **AUT** mode, the **OK** button must be pressed for 3 seconds.



The Shift Menu is used to choose between the basic menu and the full menu.

The menu contents are shown in the figures on the right and the various texts are described below:

- No** Full menu selected.
- Yes** Basic menu selected.

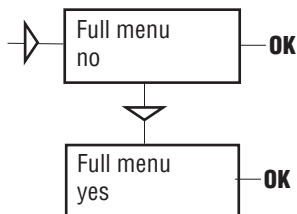


The Menu can be locked with a passcode, see Setup menu.



The Status Menu is used to select whether or not the positioner is in service.

The menu contents are shown in the figures on the right and the various texts are described below:

- o o service** Not in service. Flashing indicator in upper left-hand corner of display.
- in service** Positioner in service. Critical parameters cannot be changed.

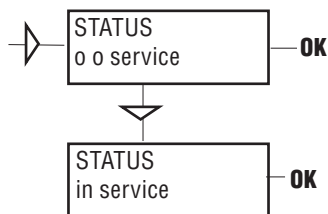

When changing between **In service** and **Out of service**, the **OK** button must be pressed for 3 seconds.

FULL MENU
SETUP



The Setup Menu is used for various settings.

The menu contents are shown in the chart on the next page and the various texts are described below:

Actuator	Type of actuator	Size of actuator	Time out
Rotating	Rotating actuator.	Small	10 s
Linear	Linear actuator.	Medium	25 s
		Large	60 s
		Extra large	180 s

Lever **Only for linear actuator.**

Lever stroke	Stroke length to achieve correct display. Input only needed in case display value is off
Level cal	Calibration of positions to achieve correct display.


Direction

Direct	Direct function (signal increase opens). Indicator/spindle rotates counter-clock wise.
Reverse	Reverse function.

Character

Linear	} See diagram.
Equal %	
Quick open	
Sqr root	
Custom	Create own curve.

Curves that show position as a function of input signal.

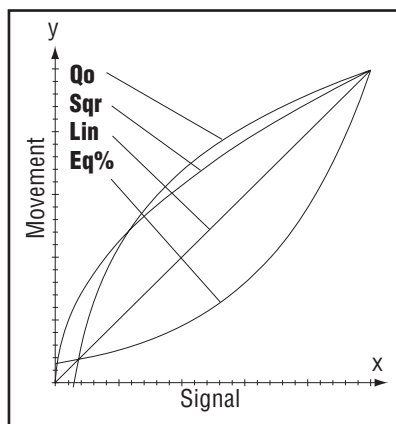

Cust chr

# of point	Specify number of points (3, 5, 9, 17, or 33)
Cust curve	Enter values on X and Y axes.

Curr range (Use this function to split range)

0%=4.0 mA

100%=20.0 mA

Possibility of selecting which input signal values will correspond to 0% and 100% movement respectively. Examples of settings:
4 mA = 0%, 12 mA = 100%, 12 mA = 0%, 20 mA = 100%.

TRVL range 0%=0.0%	Setting end positions Select Out of Service. Set percentage value for desired end position (e.g. 3%).	Start menu	Start in Basic menu or Full menu.
		Orient	Orientation of text on display.
		Par mode	Display of control parameters such as P, I, D or K, Ti, Td.
		Devicedata	
Set 0%	Select In Service. Connect calibrator. Move forward to desired end position (0%) and press OK.	HW rew SW rew Capability HART	General parameters.
100%=100.0%	Select Out of Service. Set percentage value for desired end position (e.g. 97%).		
Set 100%	Select In Service. Connect calibrator. Move forward to desired end position (100%) and press OK.	Profibus PA	Menu with HART parameters. Only amendable with HART communicator. It is possible to read from display.
Trvl ctrl Set low	Behavior at set end position Choose between Free (positioner will control until a mechanical top is reached), Limit (stop at set end position), and Cut off (Default value. Go directly to a mechanical stop at a redefined setpoint).	Status	Indicates present status
		Device ID	Serial number
		Address	1-126
		Tag	Allotted ID
Set high Values	Similar to Set low. Select position for Cut off and Limit at the respective end positions.	Descriptor	ID description
		Date	SW release date
		Failsafe	Value = preset pos Time = Set time +10sec= time before movement Valve act = failsafe (preset pos) or last value (present pos) Alarm out= On/Off
Passcode	Setting passcode for access to the menu	Foundation Fieldbus	
		Device ID	Serial number
Numbers between 0000 and 9999 can be used as passcodes. 0 = no passcode required.		Nod address	Address on the bus provided by the DCS system
		TAG–PD_TAG	Name provided by the DCS system
		Descriptor	D30 positioner
		Date	SW release date
Appearance	On display	Sim jumper	Simulate jumper, FF simulation functionality activated = ON
Language	Select menu language.		
Units	Select units.		
Def. Display	Select value(s) to be displayed during service. The display reverts to this value 10 minutes after any change is made.		



The menu contents are shown in the chart on the next page and the various texts are described below:

Close time	Minimum time from fully open to closed.
Open time	Minimum time from closed to fully open.
Deadband	Setting deadband. Min. 0.1%.
Expert	Advanced settings.
Control	See explanations below.
Togglestep	Test tool for checking functions. Overlays a square wave on the set value.
Self test	Internal test of processor
Undo	You can read last 20 changes.

P,I,D and K,Ti,Td parameters

If one of the gains is changed, the corresponding value in the other gain set is changed accordingly.

FULL MENU ALARMS

The menu contents are shown in the chart on the next page and the various texts are described below:

Deviation

Alarm generated when deviation occurs

On/Off

Alarm on/off.

Distance

Allowed distance before alarm is generated.

Time

Total deviation time before alarm is generated.

Alarm out

Select ON/OFF offers output on terminals.

Valve act

Behavior of valve when alarm is generated.

Limit 1

Alarm above/below a certain level.

On/Off

Alarm on/off.

Minipos

Setting of desired min. position.

Maxpos

Setting of desired max. position.

Hysteresis

Desired hysteresis.

Alarm on

Select ON/OFF offers output on terminals.


Valve act

Behavior of valve when alarm is generated.

See diagram below!

Limit 2

See Limit 1.

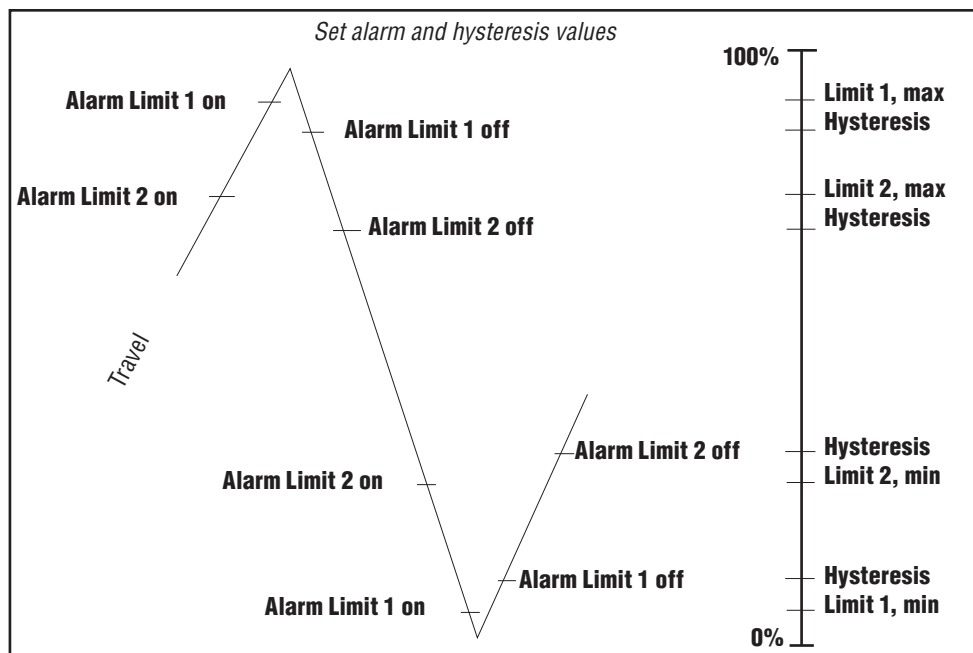

Temp	Alarm based on temperature
On/Off	Temperature alarm on/off.
Low temp	Temperature setting.
High temp	Temperature setting.
Hysteresis	Allowed hysteresis.
Alarm out	Select ON/OFF offers output on terminals.
Valve act	Behavior of valve when alarm is generated.

Valve act

No action	Alarm generated only. Operations not affected.
Goto open	Valve moves to 100%. Positioner changes to position Manual.
Goto close	Valve moves to 0%. Positioner changes to position Manual.
Manual	Valve stays in unchanged position. Positioner moves to position Manual.

Expert Calibration

When entering “ExpertCal” mode - walk through the list of parameters described below. Set values where applicable. Confirm by pressing OK.

Set point LO: Use the calibrator set to 4 mA (or set another value on the display). Press OK.

Set point HI: Use a calibrator of 20 mA (or set another value on the display). Press OK.

 
Pressure LO: Use a supply of 1.4 bar (20 psi) (or set another value on the display). Press OK. Pressure read out only possible on D30 with built in pressure sensor.

Pressure HI: Use a supply of 8 bar (115 psi) (or set another value on the display). Press OK. Pressure read out only possible on D30 with built in pressure sensor.

Transmitter: Connect 10 - 28 VDC. Connect an external mA meter to the loop. Read low value on mA meter and adjust with up/down key. Press OK to set low value. Repeat procedure to set High value. Also see video on www.pmv.nu


Pot: Potentiometer setting, see section 5. Also see video on www.pmv.nu

Full reset: Resets all set values and enters Factory mode. To reset the values only, use FACT SET in main menu, see below.



The menu contents are shown in the chart below.

The default values that were set on delivery can be reset using the Fact Set menu. Values from calibration and from other settings will then be lost.

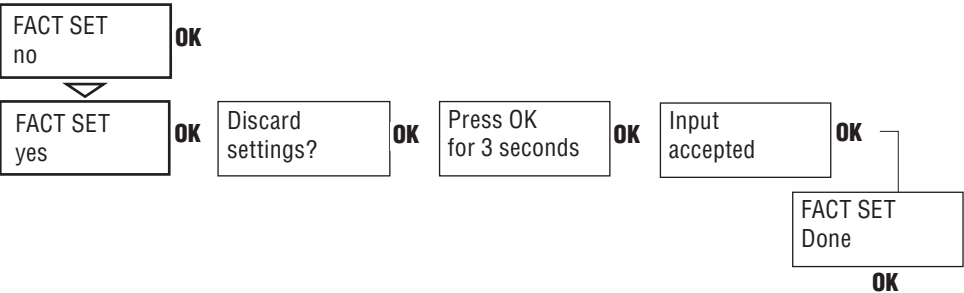

READ										pos			
MAN/AUTO		AUT,OK=MAN		MAN,OK=AUT						set&pos			
CALIBRATE		AutoCal				G Highest				set&dev			
		TravelCal				F				Pos Graph			
		Balance				D default				Supply Pr**			
		Perform				C				C+ & C-**			
		Expert cal		Foot full reset		B				temp			
						A Lowest normal				outsignal			
										statistics			
										alarms			
										# of reset			
										runtime			
										extr temp			
										Histogram			
										Reset stat			
SHIFT MENU		Basic menu											
		Full menu											
STATUS		O O SERVICE		Type		rotating		single act		small			
		IN SERVICE		Function		linear		double act		medium			
				Size						large			
										Texas-size			
SETUP		Actuator								linear			
		Lever*		Stroke		Air To Open				equal %			
				Lever cal		Air To Close				quick open			
		Direction								custom			
		Character								sqr root			
		Cust chr								#of points			
										X0=			
										Y0=			
		Curr range		0% =		0% =							
				Set 0%		Set 0%							
		Trvl range		100%=		Set 100%							
				Set 100%		Set 0%							
						Set 100%							
		Trvl ctrl		free		Cutoff Low							
		Set low		cutoff		Cutoff Hi		Direction		direct			
		Set high		limited		Limit Low				reverse			
		Values				Limit Hi		Pos/Set		Position			
		Transm.								Set Point			
		Passcode		Old		New 0=Off							
Appearance		Language		english									
				svenska									
				deutsch									
				français									
				italiano		percent							
				español		mA							
				norsk		mm		percent					
				chinese		cm		mm					
						inch		cm					
						degrees		inch					
				Units		Setpoint		degrees		bar			
						Position				psi			
						Pressure**				kPa			
						Temp				Grad C			
										Grad F			
										Kelvin			
				Def. Displ									
				Start menu									
				Start Logo		On/off		last value		position			
								basic		set&pos			
				LED		On/off		full		set&dev		Message	
								menu		Tag			
		Orient.		normal						Descriptor			
				flipped						Date			
										Device ID			
										Poll adr			
										Assemblyno			
										Univ cmd			
										Spec cm			
										Burst			

(*) appear if Linear set

(**) appear if pressure sensor exist

(x) Position is show in upper row (PID, KTITd, Min Pulse)

5. Maintenance/service

When carrying out service, replacing a circuit board, etc., it may be necessary to remove and refit various parts of the positioner. This is described on the following pages.

Read the Safety Instructions on [page 4](#) and [5](#) before starting work on the positioner.

Cleanliness is essential when working with the positioner. Contamination in the air ducts will inevitably lead to operational disturbances. Do not disassemble the unit more than that described here.

DO NOT take the valve block apart because its function will be impaired.

When working with the D30 positioner, the work place must be equipped with ESD protection before the work is started.



Always turn off the air and electrical supplies before starting any work.



Please see section for special conditions for safe use and spare parts on [page 5](#)!

Please contact a Flowserve office for information regarding proper procedures.


www.pmv.nu or infopmv@flowserve.com

Disassembling D30

Removing cover and inner cover

- Unscrew the screws A and remove the cover. When mounting cover – see [page 5](#).
- Pull off the arrow pointer, B.
- Unscrew the screws C and remove the inner cover.

Note: Removing inner cover will void warranty.

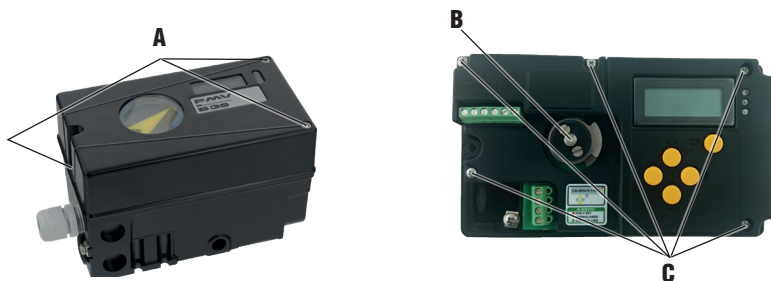


Circuit boards (PCB)




Disconnect or switch off the electric power supply before starting any work.

- Lift off the display PCB..
- Release the cable connections.
- Unscrew the two screws B and lift up the circuit board.

B

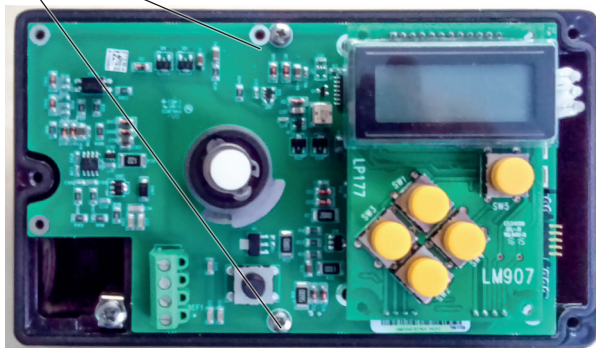

Limit Switches

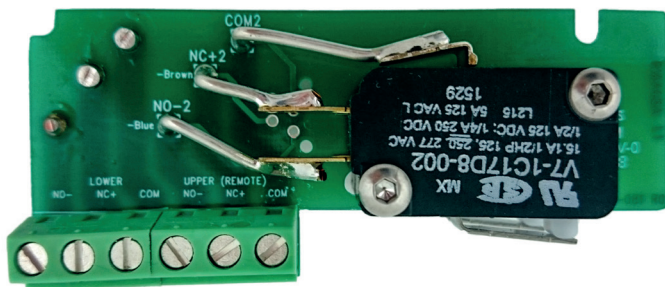

When installing the switch card, make sure it is placed correctly. Secure the PC board with the two screws. Make sure the holes are centred before tightening the screws.

Note! When installing the cam assembly for mechanical switches, retract both switch arms first.

Install the cam assembly and tighten the screws loosely to obtain enough friction to lock the cams.

Adjust the lower cam first, then the upper cam.

Valve block




Turn off the air and electric power supply before starting any work.

- Remove the three screws A and lift out the valve block

N.B. Do not disassemble the valve block


- When installing the valve block — torque the three screws to 0,4 Nm and seal with Loctite® 222.

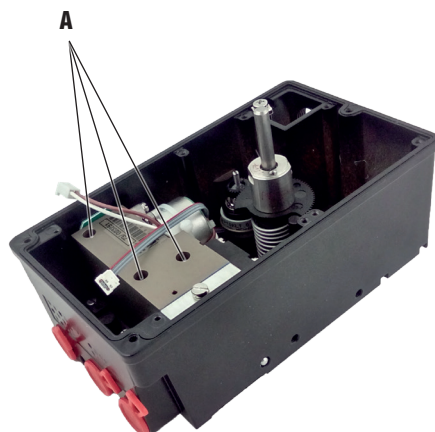

Pressure sensors

Three pressure sensors are available as an option. They indicate pressure for supply, C- and C+ air, and can be used by ValveSight™ to enable advanced valve diagnostics.

The sensors are mounted on a circuit board which mounts next to the air relay on the floor of the housing at B using three screws.

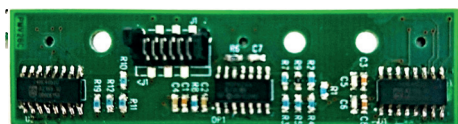

Pressure sensor PCB - top view



Pressure sensor PCB - bottom view

Potentiometer


90° spring loaded potentiometer

The spring-loaded potentiometer can be removed from the gearwheel for calibration or replacement.

If the potentiometer is replaced or the setting is changed, it must be calibrated.

- Select the menu Calibrate - Expert - Cal pot. The display shows Set gear.

- Turn the spindle shaft clockwise to end position and press OK. Either turn manually or use the up/down arrows (with supply air) to stroke the positioner to turn the shaft clockwise (see Manual mode [page 25](#)).
- Move spring (1) aside and disengage cogwheels. Turn potentiometer according to display until OK is shown. Press OK. See drawing below.
- Move back spring (1) and secure potentiometer (2) calibration. See drawing below.

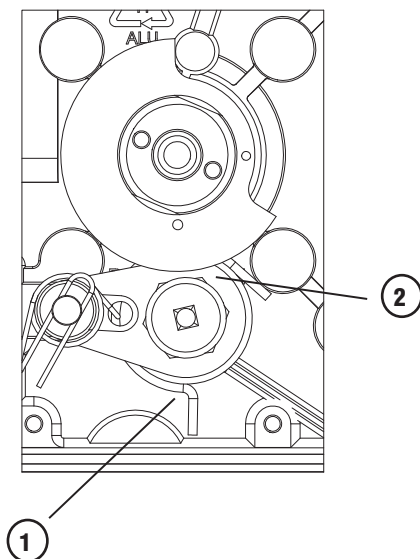

6. Trouble shooting

Symptom	Action
Input signal change to positioner does not affect actuator position.	• Check air supply pressure, air cleanliness, and connection between positioner and actuator. • Out of service, in manual mode. • Check input signal to positioner. • Check mounting and connections of positioner and actuator.
Change in input signal to positioner makes actuator move to its end position.	• Check input signal. • Check mounting and connections of positioner and actuator.
Inaccurate control.	• Perform Auto-calibration and check for any leaks. • Uneven air supply pressure. • Uneven input signal. • Wrong size of actuator being used. • High friction in actuator/valve package. • Excess play in actuator/valve package. • Excess play in mounting of positioner on actuator. • Dirty/humid supply air.
Slow movements, unstable regulation.	• Implement auto-tuning. • Increase the deadband (Tuning menu). • Adjust Performance (Calibrate menu).

7. Technical data

Rotation angle	min 25° max 100°
Stroke	From 5 mm (0.2")
Input signal	4-20 mA DC
Air supply	1.4-8 barg (20-115 psi) DIN/ISO 8573-1 3.2.3 Free from oil, water and moisture.
Air delivery	Up to 760 nl/min @ 6 bar (29.3 scfm @ 87 psi)
Air consumption	8 nl/min @ 6 bar (0.31 scfm @ 87 psi)
Air connections	¼" G or NPT
Cable entry	2x M20x1.5 or ½" NPT
Electrical connections	Screw terminals 2.5 mm ² /AWG14
Linearity	<0.4%
Repeatability	<0.5%
Hysteresis	<0.3%
Dead band	0.1-10% adjustable
Display	Graphic, view area 15 x 41 mm (0.6 x 1.6")
UI	5 push buttons
CE directives	93/68EEC, 89/336/EEC, 92 /31/EEC
Voltage drop, w/o HART	8 V
Voltage drop, with HART	9.4 V
Enclosure	IP66
Material	Die-cast Aluminum
Surface treatment	Powder epoxy
Temperature range	–40°C to +80°C (-40°F to 176°F)
Weight	1.8 kg (4 lbs)
Mounting position	Any
Communication protocols	Hart, Profibus PA, Foundation Fieldbus

Mechanical switches	
Type	SPDT
Size	V3
Rating	3 A/125 VAC / 2 A/30 VDC
Temperature range	-40°C to 80°C (-22°F to 180°F)

NAMUR sensors	
(NJ2-V3-N)	
Type	Proximity DIN EN 60947-5-6:2000
Load current	1 mA ≤ I ≤ 3 mA
Voltage range	8 VDC
Hysteresis	0.2%
Temperature range	-25°C to 85°C (-13°F to 185°F)

Proximity switches	
Type	SPDT
Rating	0.4 A @ 24 VDC, Max 10 W
Operating time	Max 1.0 ms
Max voltage	200 VDC
Contact resistance	0.2 Ω
Temperature range	-40°C to 80°C (-22°F to 180°F)

Slot NAMUR switches	
(SJ2-SN, SJ2-N)	
Type	Proximity DIN EN 60947-5-6:2000
Load current	1 mA ≤ I ≤ 3 mA
Voltage	8 VDC
Hysteresis	0.2%
Temperature range	-25°C to 85°C (-40°F to 185°F) SJ2-N -40°C to 85°C (-40°F to 185°F) SJ2-SN


4-20 mA transmitter	
Supply	11-28 VDC
Output	4-20 mA
Resolution	0.1%
Linearity full span	+/-0.5%
Output current limit	30 mA DC
Load impedance	800 Ω @ 24 VDC



9. Spare parts

No	Part no	Description
1	D4-SP37PVA	Black cover incl. screws and flat indicator
1	D4-SP37FWA	White cover incl. screws and flat indicator
2	D4-SP40	Internal cover incl. screws
3	D4-SP1516	External covers SST, 2, incl screws
4	3-SXX	Spindle adaptor (XX = 01, 02, 06, 26, 30, 36)
5	D4-SP05-09	S09 shaft compl. incl. gear wheel, friction clutch, spring
5	D4-SP05-21	S21 shaft compl. incl. gear wheel, friction clutch, spring
5	D4-SP05-23	S23 shaft compl. incl. gear wheel, friction clutch, spring
5	D4-SP05-39	S39 shaft compl. incl. gear wheel, friction clutch, spring
6	D4-SP400	Air relay complete, incl. cable, seal, screws
7	D4-SP08	Potentiometer compl. incl. spring, bracket, cable
8	3-SP37HR	PCB LCD assembly
9	D4-SP7-80H	PCB mother board 4-20 mA / HART
9	D4-SP7-80P	PCB mother board Profibus PA
9	D4-SP7-80F	PCB mother board Fieldbus
10	D4-SP84-3	Pressure sensor assembly complete
11	D4-SPGB	Bag with screws, O-rings, seals, pair of sintered brass silencers, cable gland
12	D4-SP940M	Gauge block G, complete incl. screws, seals, 3 gauges / SST, Brass
12	D4-SP940N	Gauge block G, complete incl. screws, seals, 3 gauges / SST, Brass
13	D4-SP45S	Limit switches Mechanical SPDT compl.
13	D4-SP45N	Limit switches Namur V3 P&F NJ2-V3-N compl.
13	D4-SP45P	Limit switches Proximity SPDT compl.
13	D4-SP455	Limit switches Namur slotted P&F SJ2-SN compl.
13	D4-SP456	Limit switches Namur slotted P&F SJ2-N compl.

Note: PMV does not offer spare parts for certified units

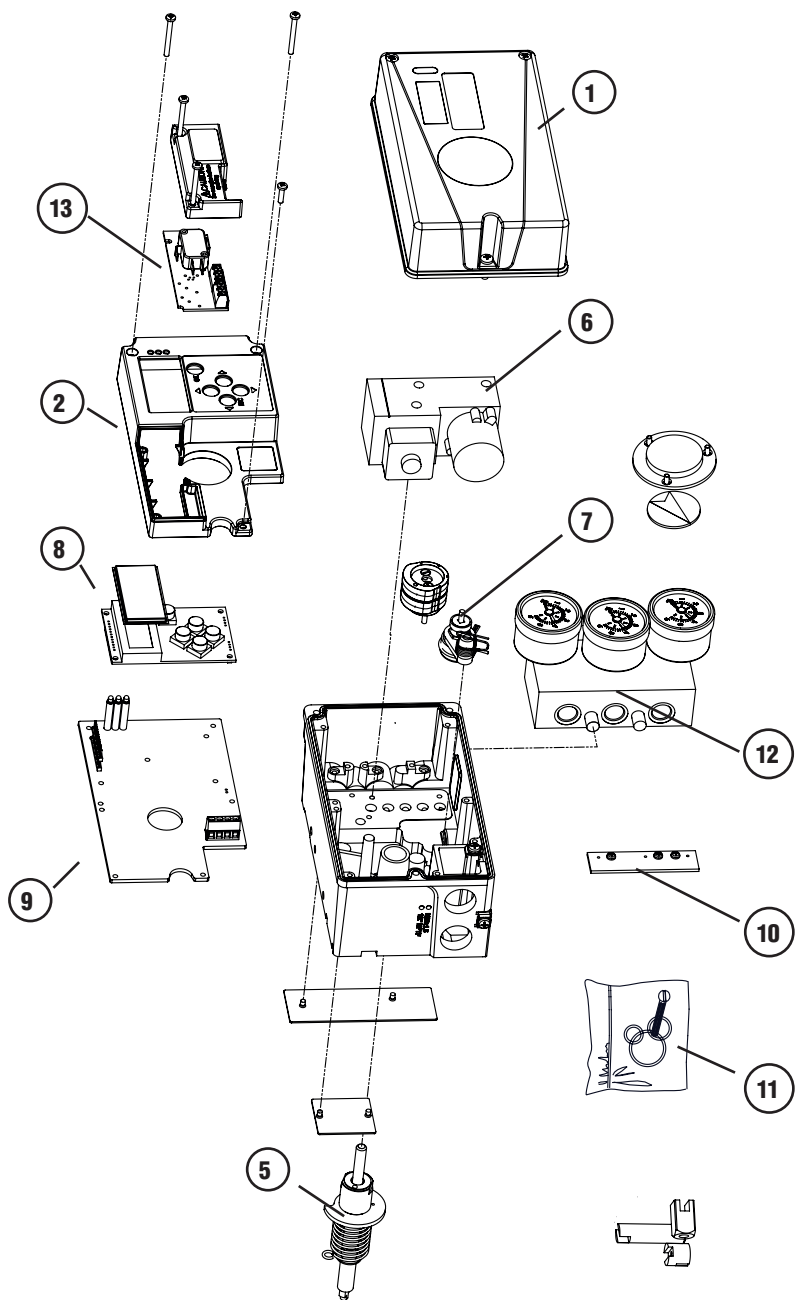



FCD PMENIM0030-01-A5 – 05/18

To find your local Flowserve representative:

To find your local Flowserve representative please use the Sales Locator

System found at www.flowserve.com

Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the user instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

For more information about Flowserve Corporation, contact www.flowserve.com or call USA 1-800-225-6989.

© May 2018, Flowserve Corporation, Irving, Texas

PMV Automation AB

Korta Gatan 9
SE-171 54 SOLNA
SWEDEN
Phone: +46 (0)8-555 106 00
E-mail: infopmv@flowserve.com

PMV USA

14219 Westfair West Drive
Houston, TX 77041, USA
Phone: +1 281 671 9209
Fax: +1 281 671 9268
E-mail: pmvsales@flowserve.com

Flowserve Flow Control

Burrell Road, Haywards Heath
West Sussex RH16 1TL
Phone: +44(0)1444 314400
E-mail: pmvuksales@flowserve.com

Flowserve Flow Control Benelux

Rechtzaad 17
4703 RC Roosendaal
THE NETHERLANDS
Phone: +31 (0) 30 6771946
Fax: +27 (0) 30 6772471
E-mail: fbinfo@flowserve.com

Flowserve Flow Control GmbH

Rudolf-Plank Strasse 2
D-76275 Ettlingen
GERMANY
Phone: +49 (0) 7243 103 0
Fax: +49 (0) 7243 103 222
E-mail: argus@flowserve.com

Flowserve Corporation

No. 35, Baiyu Road
Suzhou Industrial Park
Suzhou 215021, Jiangsu Province,
PRC
Phone: +86-512-6288-1688
Fax: +86-512-6288-8737

Flowserve (China)

585, Hanwei Plaza
7 Guanghau Road
Beijing, China 100004
Phone: +86 10 6561 1900

Flowserve Pte Ltd

No. 12 Tuas Avenue 20
Singapore 638824
Phone: +65 6879 8900
Fax: +65 6862 4940

Flowserve do Brasil Ltda

Rua Tocantins, 128 - Bairro Nova Gerti
São Caetano do Sul,
São Paulo 09580-130 Brazil
Phone: +5511 4231 6300
Fax: +5511 4231 6329 - 423